Evolio ARIA

User Manual

Main functions

- 9.7″ 1024*768 capacitive touch screen .
- Support MP3/WMA/ AAC/OGG /WAV music format.
- Support video of AVI/ 3GP/MP4/ MKV/ MOV /TS/ FLV format ,up to 1080P.
- Support TF card.
- Support picture auto browse in JPG/BMP/JPEG /GIF format
- Support multi languages.
- Support APK program installation.
- OTG function.
- Support firmware upgrade.
- Support G-Sensor.
- Support multi-point touch function.
- Support WIFI Wireless Connection.
- support external 3G.
- Support HDMI output.

Precautions

1. During the formatting or uploading/downloading, do not disconnect the tablet from the PC. Disconnection during updating or data transfer may damage files or the tablet.
2. Dismantling the tablet will void the warranty. Please check the trouble shooting section of this manual if experiencing problems.
3. Our company reserves the right to improve the product. Different software and hardware versions might affect the product performance and functions, therefore the product shall be subject to change without further notice

※ All warranty information, product features and specifications are subject to change without notice.

Buttons overview

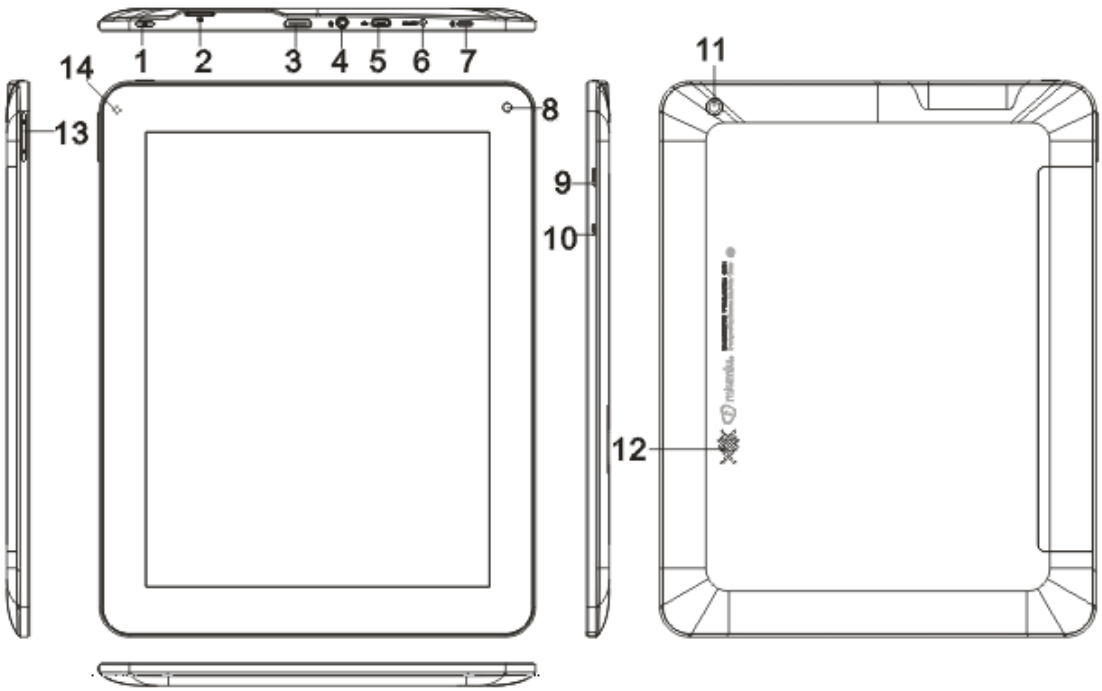

Item	Name	Item	Name
1	Power	8	Front camera
2	TF card slot	9	Reset button
3	HDMI port	10	MIC hole
4	Earphone port	11	Back camera
5	OTG/USB port	12	Speaker
6	Charging port	13	Volume button
7	Infrared receptor	14	Charging indicator

1)Press volume button to increase or decrease the volume.

2) Press and hold Power button for 3S to turn on the tablet. Pressing and holding the Power button for 3S to show “Power off” window. Choose “ok” to turn off the tablet, choose “cancel” to return.

3) Pressing the power and volume button at the same time will cut picture from the screen.

Note: When the screen has a screen timeout, short press the Power button to wake it up.

Basic Operations

- Touch & type

Use your fingers to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the Touch screen. You can also change the screen's orientation.

To select or activate something, touch it.

To type something, such as a name, password, or search terms, just touch where you want to type. A Keyboard pops up that lets you type into the field.

Other common gestures include:

a) Touch & hold: Touch & hold an item on the screen by touching it and not lifting your finger until an

Action occurs. For example, touching an icon on home screen and hold it, when the Remove icon is shown on the screen, dragging the selected icon to this icon can remove it from the home screen.

b) Drag: Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reaches the target position. For example, you can drag to reposition shortcuts on the Home screen.

c) Swipe or slide: Quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag something instead). For example, you can slide a Home screen left or right to view the other Home screens.

d) Double-tap: Tap quickly twice on a webpage, map, or other screen to zoom. For example, double tap a webpage in Browser to zoom in and double-tap again to zoom out.

e) Pinch: In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

f) Rotate the screen: On most screens, the orientation of the screen rotates with your device as you turn it. You can change this Display setting.

Related settings

Settings > Device > Display

- **How to reset the tablet?**

If your tablet cannot response to any function key, please use pin to press the reset button in the reset hole to reset the tablet

- **How to save power?**

  The battery icon on the screen shows the rest volume of electricity. To save the power, in system setting interface, please set Brightness and Sleep to a reasonable level.

- **How to charge the tablet?**

Please charge the tablet timely before the battery icon shows blank.

The tablet can be charged via the commanded DC charger.

The whole charging period need 5 hours. It is normal to find that the machine surface is warm under charging state.

- **G-sensor**

  If do settings setting→display→Auto-rotate screen →on, the tablet will switch the screen orientation automatically when it is being rotated.

- **Connect to Computer and File Transfer**

  When the tablet on,connect the tablet using the supplied USB cable, an interface is shown for your choice, on which if touch “turn on usb storage”, then the player enters the USB connection mode.

  In the USB connection mode, the tablet will be detected as standard removable disks by your

computer and allows the transfer and management of files on the player without the need for the installation of 3rd party software.

Touch “turn off usb storage”can exit USB connection mode.

Home screen

Press power key and hold for 3S to power on the tablet, then the default home screen is shown as the below:

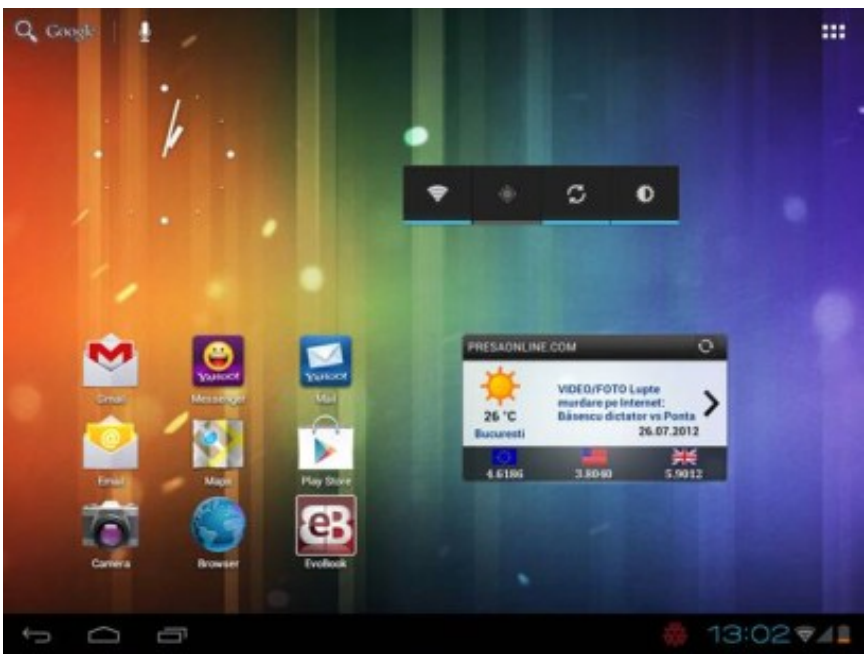

At the bottom of the screen, you'll find three Navigation buttons. They're always available. No matter
what you're doing with your tablet, you can always get back to the main Home screen or return to previous screens:

 Back: Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can’t go back any further in your
history.

 Home: Opens Home. If you're viewing a left or right Home screen, opens the central Home screen.

 Recent apps:

Opens a list of thumbnail images of apps you've

worked with recently.To open an app, touch it. To remove a thumbnail from the list, swipe it left or right.

Note:After a short time without getting used, these buttons may shrink to dots or fade away, depending on the current app. To bring them back, touch their location.

Status icons: it is used to show the current status of network connection, battery volume and system time.

All Apps: Touch it to see all your apps and widgets. To open an app, folder, or widget, touch its icon.

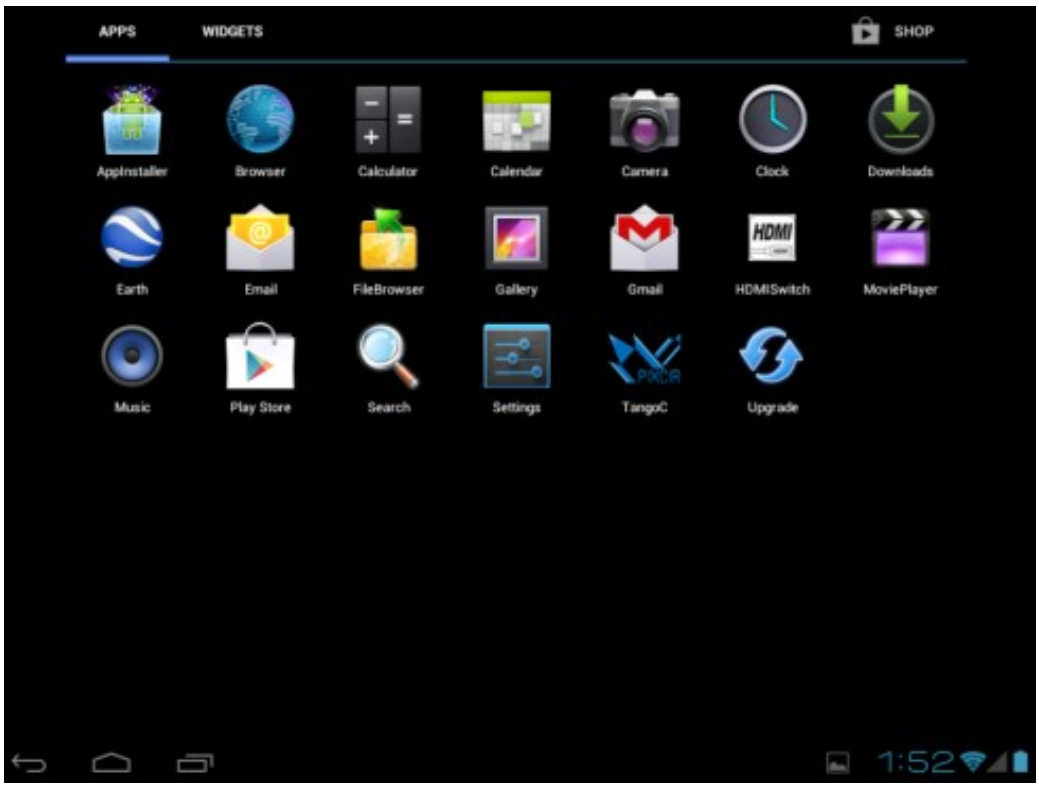

Settings

From a Home or All Apps screen, touch the Settings icon

to enter the system setting interface, on which user can do settings shown below:

a) Wireless & networks: touch to enter Wi-Fi managing interface, on which user can view current Wi-Fi

connection under item Wi-Fi. On Wi-Fi managing interface, if user touch item Wi-Fi settings, then your tablet will scan all available Wi-Fi networks and list them on the screen .

On the Wi-Fi network list, touching any Wi-Fi network scanned can view its signal status and select whether connect it or not, and touching menu icon popup more advanced settings.

b)Mobible networks:when user want external connect 3G dongle,please do settings- Wireless & networks-more- Mobible networks-Data enabled.

c) Sound: touch to setting “volume, Default notification,Touch sounds,screen lock sounds”

d)Display:touch to setting ”Brightness,Wallpaper,auto-rotate screen,Sleep,Font size”

e)Storage: touch to view SD card & device storage setting.

f)Battery:touch to scan the situation of the battery.

g)Apps:touch to scan the APPS .

h)Location & services: Location settings.

i)Security:user can do screen security here.

j)Backup & reset:touch to enter”Factory data reset”interface.

k)Language & input: touch to set system language and text inputting method.

l)Accessibility:accessibility setting

k) Date & time: touch to set system time and date.

l) About tablet : touch to view basic information about your tablet.

Note: it is important to do system setting, please enter the setting interface of your tablet to view each setting items carefully before using your tablet.

Appinstaller

From a Home or All Apps screen,touch the Appinstaller icon.Enter the corresponding interface,on which user can choose device to scan apks

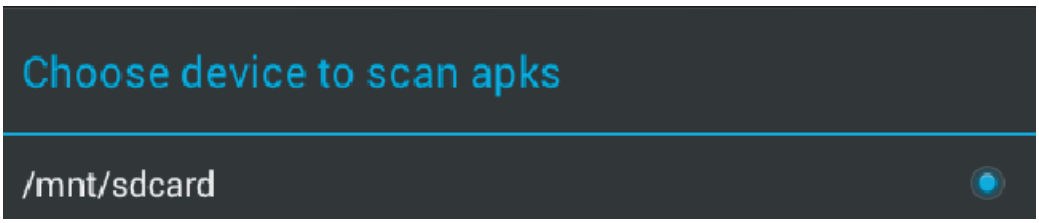

Choose the device,touch to enter into the APP list.

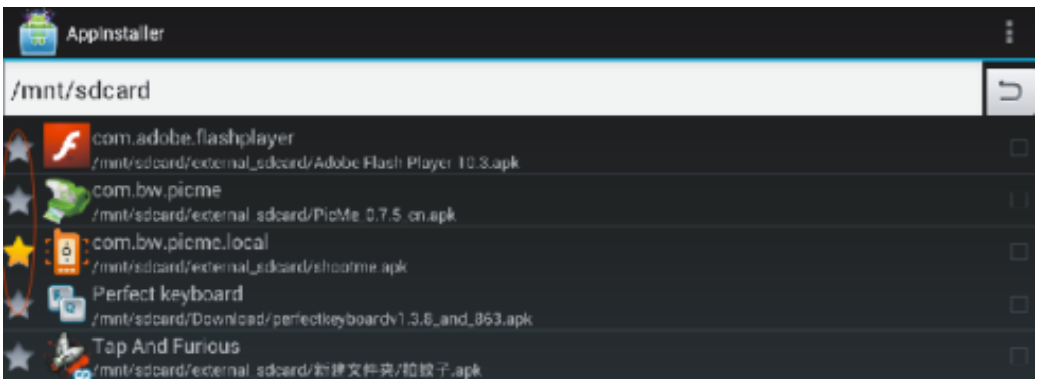

The star highlighting before the app means this app have already installed.

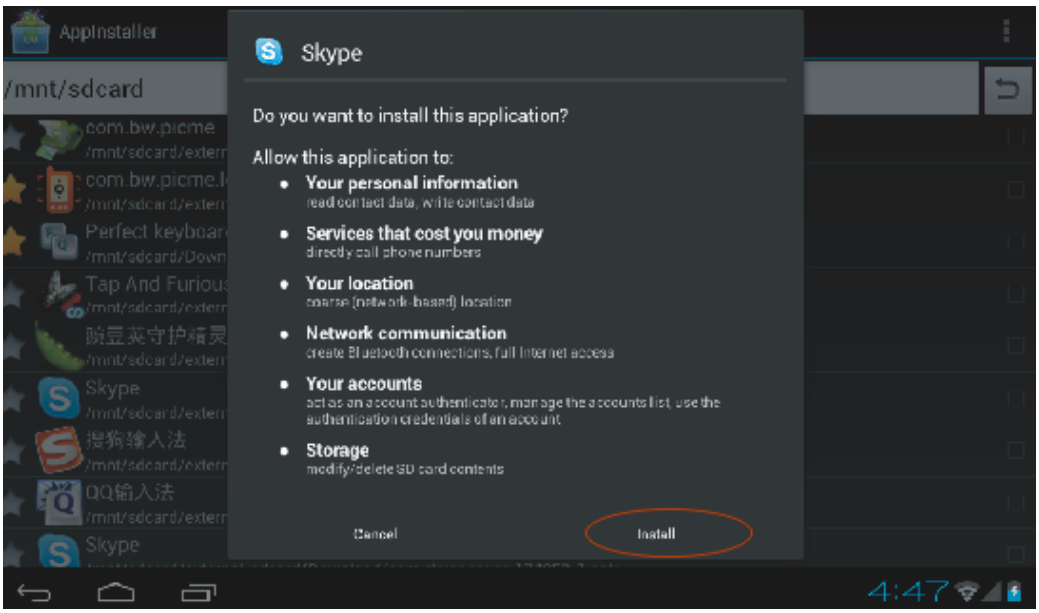

The grey star means this app uninstalled.

Touch an uninstalled app show installing window.Choose “install” to install the app,choose “cancel” to return.

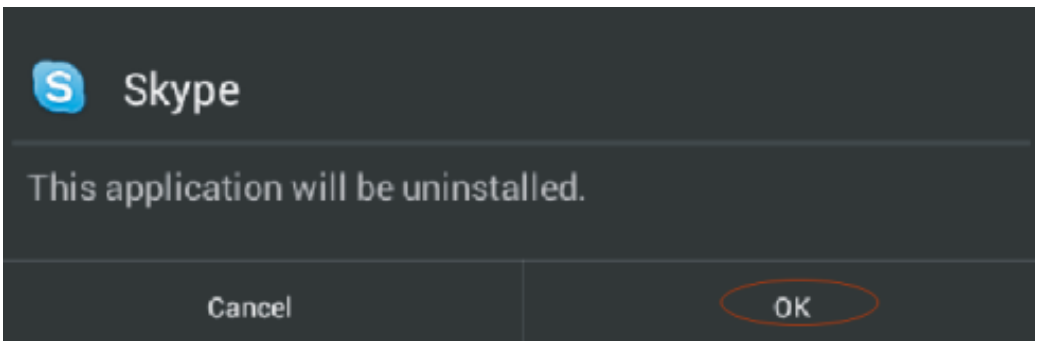

Touch an installed app show uninstalled window.Choose “OK” to uninstall the app,choose “cancel” to return.

Note:No matter in which interface,tap icon,can show submenu.

FileBrowers

From a Home or All Apps screen, touch the FileBrowers icon , enter the corresponding interface, on which user can enter file management interface.

Select/open mode: when this icon popup light,you can play the music/movie direactly;when this icon popup grey,tough Can popup edit dialog(cut,copy,paste,delete)

show home page

Select/open mode

Show edit dialog

show sort dialog

Back to parent dir

View by thumbnail

Help

When this icon show highlight,user can play the music and movie directly.

When this icon show grey,user can copy,cut,delete the file in this tablet.

HdmiSwitch

Error! Reference source not found.

From a Home or All Apps screen, touch the HdmiSwitch icon

, enter the corresponding interface,

Use Hdmi cable connect the Tablet to other device.

User can use remote control .

When Hdmi connect ,user can choice “PANEL” to

disconnect the Hdmi.

When HDMI connect with the TV,the screen will show grey,the panel can use as touch mouse.

Troubleshooting

- **The tablet cannot be turned on.**

Please charge it via the DC charger to check if the battery is low. If not, then please reset the tablet.

- **Incorrect language displayed.**

Please make sure that you have selected the correct language. Set language in (Settings) => (personal) => (Language &input)

- **Files cannot be downloaded.**

1. Make sure the proper connection between computer and tablet.
2. Check if the memory is full.

3. Check if the USB cable is damaged and replace if necessary.

- **Audio files not playable.**

This tablet cannot play audio files that are copy protected. Please ensure that only files that contain no copy protection are transferred to the tablet.

- **Fail to open the web page.**

Please check whether successfully create the Wi-Fi connection.